



KT-9018E Universal A/C remote user guide



Product Description

KT-9018E is using the patent of shell design and code setting that invented by our researchers. You can press the numeric buttons (0-9) for the code required directly, visual and convenient, quick and efficient. It has clock accurate, timer on and off, code memory and also has original function of "intelligent cool" "intelligent heat" . So it is convenience for using.

Preparation

The remote control can be used after setting. Pull side cover of remote control down, put 2 AAA (VM-4, R03) batteries as per polar indicated on the battery cabin.

Patent coding set up

1. Find out the codes that required from the code table. There are many groups' codes of each brand. Please try the first group, if it does not operate your equipment, try the second, and do like this until the codes can operate your equipment. Ex: AUCMA, you can choose 0288, if it does not work, please try the 0289etc.
2. Press the SELECT button, the code on the LCD blinks once. Enter the 4 digit code in turn. Ex:0288, press the "0" button, "0" stop blinking, the last three number blinking, then press the "2" button., the last two number blinking, and press the "8" button, the last number blinking, finally press the last number "8" , all of the 4digit code "0288" stop blinking, code entry is complete now. The remote control confirm the code automatically, and then these numeric button get back original function normally. You can operate your air conditioner now.
3. After your air conditioner on, try the other functions of your equipment, if do not operate your equipment, please choose the next group of code until all the functions can work. The remote control is 4000 codes in one, so it is invalid when the code greater than 4000.

Auto-search by one key

If you do not know the brand of your air conditioner, or if your brand is not listed in the code cable, try searching for your code as follow:

1. Put the remote control aim at your air conditioner, press the "SELECT" button for 5 seconds and release, the remote control is entering the auto-search status, launch the signal continuously, the code blinking and increasing. When the air conditioner receive the signal, and send a BUZZER, press any keys to confirm.
2. After your air conditioner on, try the other functions of your equipment, if do not work, repeat these steps until it can operate your equipment.

Using of "intelligent cool" and "intelligent heat"

In the summer, press the "intelligent cool" only, the air conditioner will be cooled immediately. In the winter, press the "intelligent heat" button only, the air conditioner will be heated immediately. In both status, the air conditioner will let the heating and cooling in a comfortable temperature automatically, and the fan and swing are automatically. At the same time, it also can adjust the temperature by the "+" "-" buttons according to requires. These two intelligent keys suit the children and the old especially.

Clock set up

1. Press the "time" button, clock signal is blinking.
2. Press the "+" "-" of the "time" button, setting to the current time.
3. Press the "time" button again, stop blinking, the time setting is complete. (If you did not press the "time" button, it can be setting automatically after 5 seconds)

Timer on

You can set timer on, only turning off your air conditioner.

1. Press the "TMR on" button, the LCD displays the clock signal ⌚ and time blinking.
2. Press "TIME/code" "+" "-" button, adjust the time when you want to make the air conditioner turn on automatically.
3. Time blinking and it will stop after 5 seconds. The LCD displays current time ⌚ and clock signal. Now setting is complete.

Timer off

You can set timer off, only after turning on your air conditioner.

1. Press the "TMR off" button, the LCD displays the clock signal ⌚ and time blinking.
2. Press the "TIME/CODE" "+" "-" button; adjust the time when you want to make the air conditioner turn off automatically.
3. Time blinking, and it will stop after 5 seconds. The LCD displays current time ⌚ and clock signal. Now setting is complete.

Note

1. If you press the TIMER ON/OFF key while the time is flashing, timer is deleted.
2. After timer setting is finished, you should make the remote control's emit directs to your air conditioner's receiving location in available distance. If not, the setting is deleted.
3. If you want to see the timer, you should press the TIMER ON/OFF key, the LCD will display the time and after 5 seconds it will display current time.

Attention

1. If it is not used for a long time, remove the battery to avoid leakage liquid of the battery to damage the machine. When the LCD looks dim, please change batteries. (New and old batteries can not be used together) After the batteries are replaced every time, it is not necessary to set model code again.
2. As usual the LCD only display the time when pressing model codes "Enter" button, you can find the code and it is showed on LCD. After 5 seconds it returns time.
3. Check carefully that there is no remora between remote controller and Air conditioner when the time on/off doesn't work. Because the operation is effective only when the air conditioner receives the timer on/off signal from remote controller.
4. The manufacturer keeps the right to change the parameter and function of product.

Technical Parameters

Controllable distance: Large than 8 meters

Power supply voltage: DC3V

Battery model: Battery AAA(UM-4, R03)*2

Dimension: L115mm*W46mm*D21(15)mm

Weight: Approx.50g(excl. the batteries)

Manufacture: Suzhou QUNDA Electronics CO.LTD

Post code: 215128 **Website:** <http://www.qunda.com>