
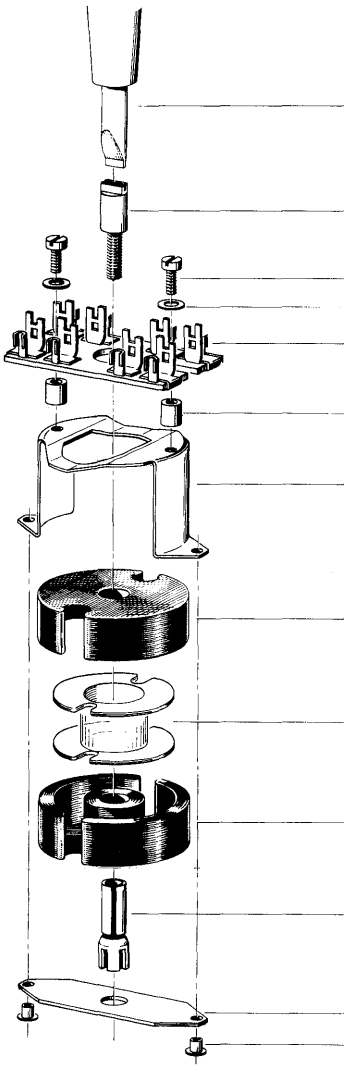


Type for wired circuits

Individual parts		Part No.	Page
	Adjusting screw driver (for assembly only)	B63399	274, fig. 2
	Adjusting screw or screw core	B65579 B63310	239 239
	Cylindrical screws 1) Washers 1)		
	Solder tag board as required	B65633	238
	Threaded bushes (only for type with solder tag board)		
	Yoke	B65633	238
	Pot core	B65631	236
	Coil former with 1, 2 or 3 sections	B65632	237
	Pot core	B65631	236
	Threaded sleeve part "c" or "e"	B65579	239
	Base plate with 2 tubular rivets	B65633	238

1) These parts are supplied for types with solder tag board.

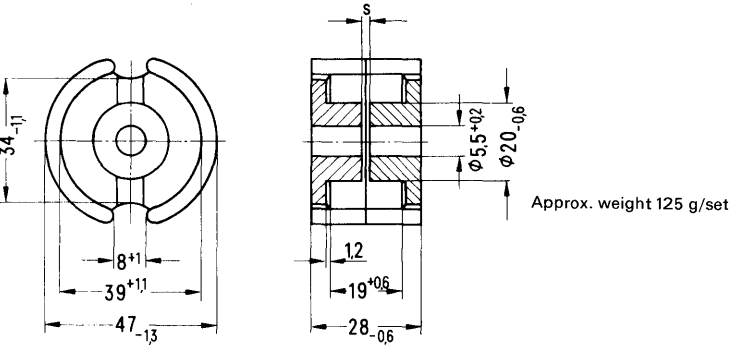

Dimensions in mm

Magnetic data

Core factor	$\Sigma l/A =$	0.232 mm ⁻¹
Effective length	$l_e =$	72.5 mm
Effective area	$A_e =$	312 mm ²
Effective volume	$V_e =$	22600 mm ³

A _L value		SIFERRIT- material	Total air gap s in mm approx.	Effective permeability μ_e	Ordering code
nH	tolerance				

with air gap

250	± 3% Δ A	N 22	1.9	46	B65631-J0250-A022
400			1.0	73.5	B65631-J0400-A022
630			0.58	116	B65631-J0630-A022
1250			0.22	231	B65631-J1250-A022
1250		N 28	0.28	231	B65631-J1250-A028
1600	± 5% Δ J	T 26	0.2	295	B65631-J1600-J026
2500			0.1	462	B65631-J2500-J026
4000	±10% Δ K		0.05	740	B65631-J4000-K026

without air gap

9500	+30 -20 % Δ R	T 26			B65631-J0000-R026
------	------------------	------	--	--	-------------------